

Bluetooth player Roidmi

Step-by-step usage of Roidmi

Settings recommendations

1. To install the player and Bluetooth connection, please read the installation guide in the Roidmi application.

2. The default frequency is 96.4MHz.

3. After a successful pairing Roidmi with a smartphone, you can set the FM radio frequency via phone, or use an automatic search of FM frequency of broadcasting music files, stored on your phone.

4. We recommend an FM frequency in accordance with the recommendations of the App to maintain the highest possible sound quality.

5. If your smartphone does not find Roidmi, make sure that Bluetooth is enabled on your phone, and cigarette lighter has a power supply; If the device for a long time do not pair, try to connect to the new device via smartphone or restart Roidmi.


Warranty

Warranty service is carried out in accordance with the law of the «rights of consumers» and «Law on product quality.» The warranty service includes:

During the warranty period you have a right to repair, exchange or return an item. For repair, replacement or return of goods you need to present a receipt.

1. In case of return of goods, without valid reason, within 7 days from a date of purchase (via online stores), the buyer pays the cost of delivering it.

2. In event of a problem from the «List of faults» listed below, technical service Xiaomi determines cause of a problem, then you can use the warranty service.

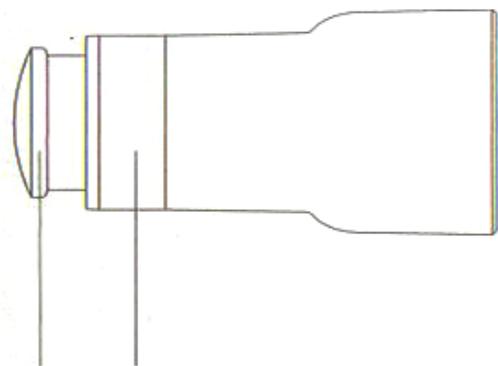

positive terminal (anode) negative terminal (cathode)

Main characteristics

Input parameters: 12-24V ---; 0A-2.4A

Output parameters: 5V --- 2.1A

Output Power: 15.5W

Requirements: App supports Android 4.0 and higher

For use with the car cigarette lighter

Standard: Q / WXR001-2015


FM: 87.5-108MHz

Bluetooth: 4.0 and above


Model: BFQ01RM

Producer: «Wuxi RuiMi Technology»

CMIIT ID: 2015DP4676

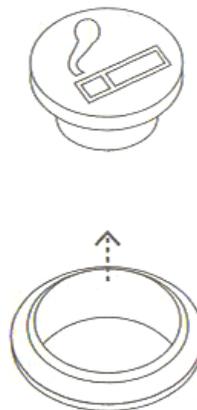

1. Remove the cover of a cigarette lighter in a car. Make sure there is no waste inside of a cigarette lighter, .

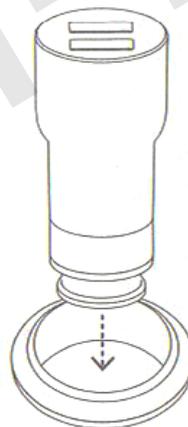

2. Insert Roidmi to a cigarette lighter. When flashing: Pairing device via Bluetooth or no connection. A steady light: a successful connection of devices via Bluetooth

Presence of toxic and hazardous substances

Name	Toxic and harmful substances and elements					
	Pb	Hg	Cd	CrVI	PBB	PBDE
PCB	X	0	0	0	0	0
Electrodes	0	0	0	0	0	0
Casing	0	0	0	0	0	0

0: toxic and harmful substances in all components of the device contained in an amount below the limit value according to SJ / T11363-2006 «requirements limiting the presence of toxic and hazardous substances in products.»

X: indicates the presence of toxic and hazardous substances at least one of the components in this product in excess of the limit value, according to SJ / T11363-2006 «requirements limiting the presence of toxic and hazardous substances in products.»

This product conforms to the European RoHS requirements and regulations for the protection of the environment; international countries still can not replace or reduce the aluminum content in copper alloy. In terms of environmentally sound management stated that under normal operating conditions is not possible leaks of hazardous substances or elements.

Type of warranty service	Terms of warranty
Return	During 7 days after signing the warranty card, you can return the goods in case of problems with a quality of the device.
Replacement	During 15 days of signing the warranty card, you can replace the goods, in case of problems with a quality of the device.
Repairs	During 1 year from the date of signing warranty card, you can use the warranty in case of problems with a quality of the device.

More information you can find out by contacting the service center

List of faults

	List of faults
Bluetooth player Roidmi	<ol style="list-style-type: none"> 1. Problems with incorrect playback or playing music files stored on your smartphone 2. Problems with charging other devices 3. Cracks / breakages due to material or construction of unit

Precautions

1. Total power of the connected devices to charge must not exceed the rated output power of Roidmi.
2. Do not dismantle or repair your Bluetooth player, otherwise it may cause a fire, an electronic breakdown or even a complete failure of the device.
3. Avoid close contact of the device with children and animals, especially a close eye contact with indicators player.
4. Avoid contact with moisture or liquids and the device.
5. To avoid damage to the player, do not allow any objects into USB port.

Warranty repair

During the warranty period, in case of problems with a quality of the device, after providing a receipt and warranty card, you are entitled to warranty service.

Guarantee is not granted:

1. In the case of missing or damaged, the warranty card or a card to fill in information about maintenance.
2. Problems as a result of self-disassembly of the device.
3. In an event of water ingress into the device or the occurrence of problems due to human factors.
4. Damage caused by force majeure.