


Mi earphones Quantie (Pro, Hybrid)

Replacing an ear cushions

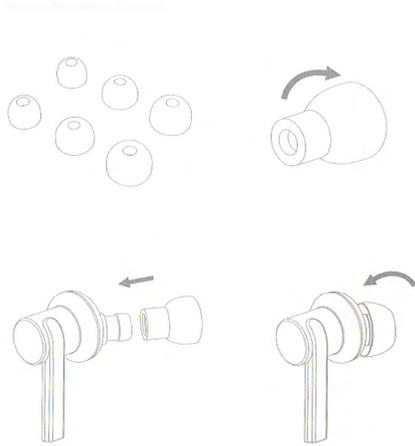


1. Choose an appropriate size of your ear cushions;
2. Turn inside out an ear pads;
3. Insert an ear pads into the corresponding holes to extract audio;
4. Turn inside out an ear cushions to its original position.


Headphone`s specs

Model: QTER01JY;
Type: in-ear headphones;
Function of remote control: yes;
Main Material: enamelled copper wires;
Impedance: 32 Ohm;
Weight: 14g;
Cable length: 1.25m;
Headphones sensitivity: 101 dB;
Jack: 3.5mm gilding;
Max power: 5mW;
Standard: GB / T 14471-2013;
Frequency range: 20-20 000Hz.

Mi smartphone management

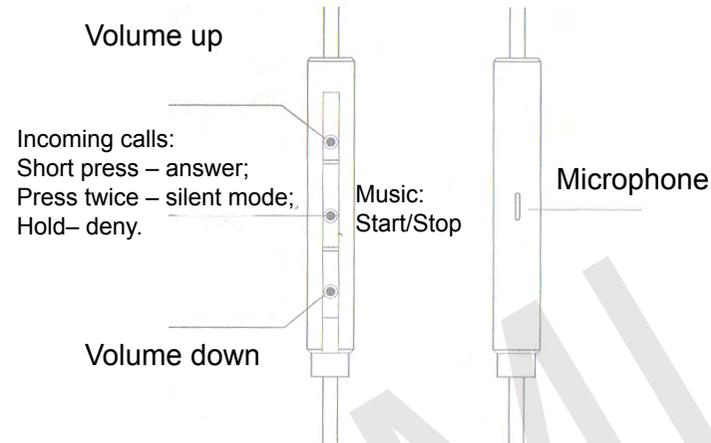


Apple iPhone Management

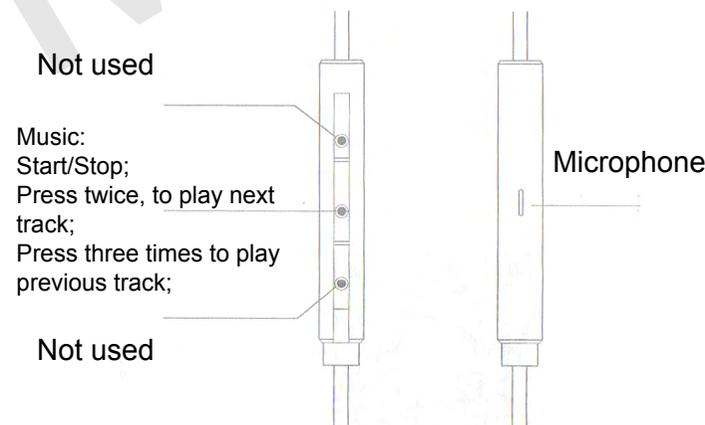

The Cable of the Headphones

Using TPE material that reduces friction and noisy sound is more pleasant on contact with human skin

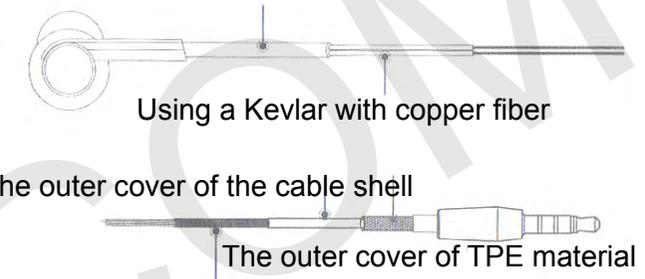

Warranty

Warranty service is carried out in accordance with the law of the «rights of consumers» and «Law on product quality.»

The warranty service includes:

1. Within 7 days from the date of purchase, in case of a problem from the «fault list» Xiaomi service center determines the cause of the problem, then you can choose a free replacement product or a refund.
2. Within 8-15 days from the date of purchase, in case of a problem from the «fault list» Xiaomi service center defines the problem, and then you choose a free replacement or repair of the goods.
3. Within 12 months from the date of purchase, in case of a problem from the «fault list» Xiaomi service center defines the problem, then you get a free repair.

Non-warranty cases

1. Maintenance of devices in non-authorized service center, improper use, falling, neglect, abuse, liquid ingress, accident, broken, or if a label corrupted;
2. The warranty period has expired;
3. Damage caused by force majeure, such as lightning, fire or flood;

4. Breakdowns that do not correspond to the «fault list» of Xiaomi service center;
5. The failure of the device from the «List of faults», which arose in connection with the human factor, and which interfere with normal operation.

List of Faults

Improper operation of functions, described in the manual;
No sound from speakers;
The improper work of a microphone;
Improper operation of buttons;
Cracks / damage due a structure of a material of the device.