




oclean

Quick user guide

- Briefly press the power button to start the teeth cleaning mode,
- When using the brush, to switch the intensity of the cleaning press and hold the button for 2 seconds or longer;
- Lights of indicators 1-4 shows different intensity of cleaning, the more indicators light up, the higher the intensity of cleaning;
- By default, the standard cleaning mode is used, if you need more cleaning modes, as well as for checking tooth decay reports, download the Oclean mobile app, connect to the brush with Bluetooth, and make individual settings and switching modes.

Scan QR code to download



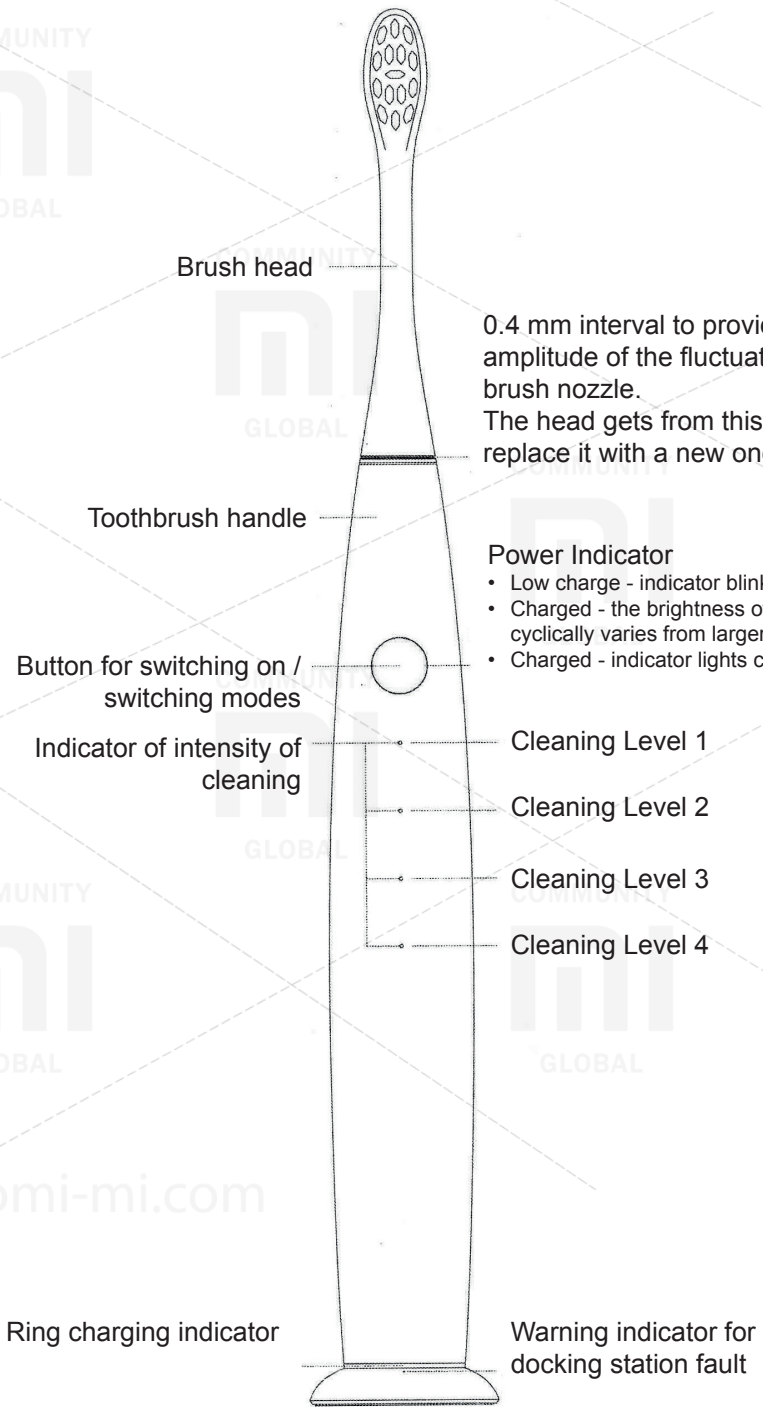

Brush head

0.4 mm interval to provide the amplitude of the fluctuation of the brush nozzle.
The head gets from this place to replace it with a new one

Toothbrush handle

Power Indicator

- Low charge - indicator blinks
- Charged - the brightness of the indicator cyclically varies from larger to smaller
- Charged - indicator lights continuously

Button for switching on / switching modes

Indicator of intensity of cleaning

- Cleaning Level 1
- Cleaning Level 2
- Cleaning Level 3
- Cleaning Level 4

Ring charging indicator

Warning indicator for docking station fault

Magnetic docking station