 


Mi Bunny Speaker

Overview

Accessories

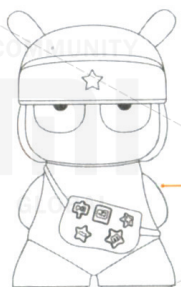

Mi Bunny Speaker x 1

 
Overview



Micro SD slot



Charging port

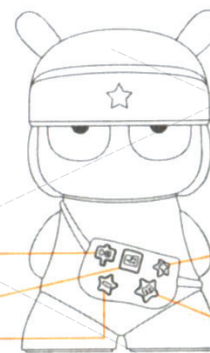

1 Play/Pause
Long press: on/off device



2 Switch SD card folder
Long keypress: activate previous folder



3 Volume down
Long keypress: switch previous track



4 Volume up
Long keypress: switch next track



5 Switch files source (Bluetooth or SD card);
Long press: detection devices via Bluetooth

 
 


2+4 Charge level information
Press both buttons simultaneously

* Connect to new devices
Press and hold (1) for 2 seconds, then resume detection of Bluetooth device.
Select connection to pair devices.

* When downloading music on SD card by connecting a USB cable to your computer, press the button (5) to turn the copy.

Connecting

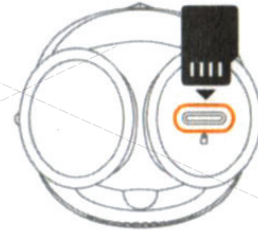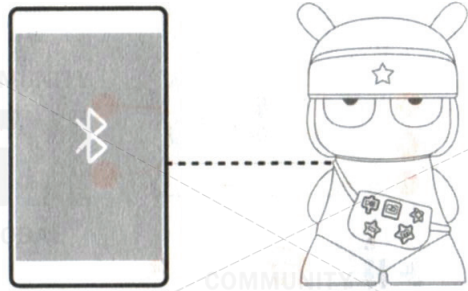


Turning Mi Bunny Speaker on

Press and hold a button (1) for 2 seconds, until you hear corresponding beep. Mi Bunny Speaker automatically turns on Bluetooth mode of devices detection.

Connecting to other devices

 Open Bluetooth settings, select «Mi Bunny Speaker» in a list of available devices. After successful combination of appropriate devices you can hear a beep signal. Indicator will light up blue. With further use turn on Bluetooth on Mi Bunny Speaker and device automatically connects to it.

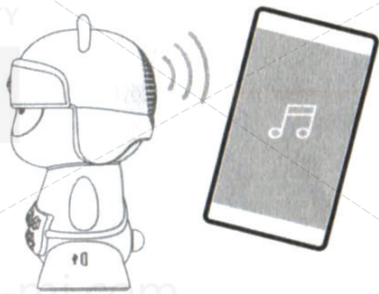

Frequently used functions

Play music via Bluetooth

Pairing of smartphone and Mi Bunny Speaker: smartphone operating as a control panel and Mi Bunny Speaker is a speaker.

Play music from SD card

After inserting a card, press Play button to play files, stored on Micro SD.
* Support Micro SD 32GB or more.
* Upload tracks to SD card via USB cable.

Notes

Charging

During charging a power indicator flickers green. Permanent Red light indicates a full charge of the device.
* During charging there is a certain limit of playback volume.

Specifications

Maximum output power: 2.8 W x 1 (4 ohms, THD <1%);
Speaker diameter: 45 mm, 1 driver;
Bluetooth Edition: 4.0;
Frequency: 150 Hz - 20 kHz;
Battery capacity / Voltage: 650 mAh 3.7 V;
The duration of battery life: 3 hours (60 dB / 1m);
Power Consumption USB: 5 V, 500 mA;
Size (length x width x height): 80 x 74 x 136 mm;
Operating temperature 0 ° C - 45 ° C.

Warranty

During a warranty period you have rights to repair, modify or return. For repair, replacement or return of goods, you must present a receipt.

1. Within 7 days of purchase, in the event of problems, you can choose a free replacement product or a refund.
2. Within 15 days of purchase, in the event of problems, you can choose a free replacement product or repair.
3. Within 12 months after the purchase, in the event of problems, you free repair.

Conditions, are not included in warranty

1. Damage, resulting by improper use, maintenance or storage device;
2. The warranty period has expired;
3. Damage, incurred in a force majeure such as lightning, fire or flood;
4. Breakdown, resulting repair device in unauthorized service centers.

- * In case of incorrect battery replacement there is a danger of explosion.
- * To replace the battery you must use the same model and similar models.

